



# PCG03 **PLUS**<sup>+</sup>

Quick Start Guide



Thanks for Choosing MeLE PCG03!



MeLE PCG03



12V/1A Power Adaptor



User Manual & Warranty Card

## Products Specification

## 2

<b>Processor</b>	Intel Quad Core Z8300 (up to 1.84G Hz)
<b>Graphics Processor</b>	Intel HD Graphic (Gen8 LP)
<b>Memory</b>	2GB DDR3L
<b>Storage</b>	32GB eMMC

<b>USB Host</b>	USB Host 3.0 / USB Host 2.0 x 2
<b>Networking</b>	10M / 100M Ethernet
<b>Wireless Networking</b>	Wi-Fi 802.11 b/g/n Bluetooth 4.0
<b>Operating System</b>	Windows 10 Home

 **Power LED**

The power LED blinks when the box is powered on.



 Power button

 SD card slot

 USB 3.0 Host

 Headphone / Audio / Microphone Out jack

 USB 2.0 Host x 2

 LAN port

 VGA port

 HDMI port

 Power input (DC12V)

## 4.1 Connection

### Adjusting the resolution of video output via HDMI / VGA to HDTV or Monitor

Follow the steps below to adjust the video output when connecting the MeLE PCG03 to a HDTV or monitor via HDMI/ VGA


1. Press right key of mouse and choose Graphics Properties .
2. Double click Display.
3. Choose the correct "resolution" and "Refresh Rate" to adjust to correct display on TV.



### Configuring audio output via an HDMI device or Audio digital devices

Follow the steps below to enable audio output when connecting the MeLE PCG03 to a TV or audio digital devices via HDMI or 3.5mm stereo jack.

1. Access the Sound settings via the system Control Panel.
2. Under Playback devices, click the display device that corresponds with your HDMI audiocompatible display
3. Click the Set Default button in the lower right hand corner.
4. Click OK to exit the setup.

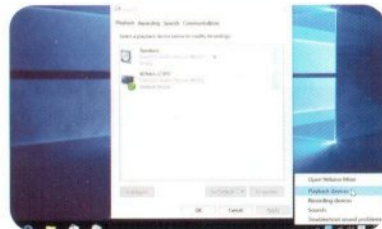

#### Service

E-mail: [meleservice@mele.cn](mailto:meleservice@mele.cn)  
Web: [www.meleshop.com](http://www.meleshop.com)



MeLE Official Store



MeLE Forum



MeLE User Manual



You Tube